

Imaging Supplies Co, Inc.

804 Woodland Ave, Sanford N.C 27330 (919) 776-1152 (800) 518-1152



BookletMate




Lightweight, Portable Booklet Maker

BookletMate

Imaging Supplies Co, Inc. continues it's effort to provide the complete solutions to your binding needs by offering the BookletMate tabletop booklet maker. In today's world of short runs and quick size changeovers, the economical BookletMate is a perfect fit!

Simple Operation:

- Place the collated set on the table
- Move the side guide until both sides touch the edges of the set
- Use hand lever to operate both staplers
- Reverse hand lever to fold and booklet is ejected between rollers

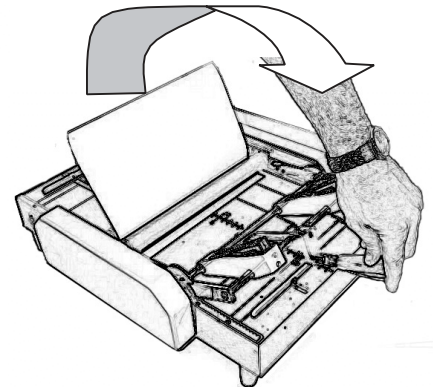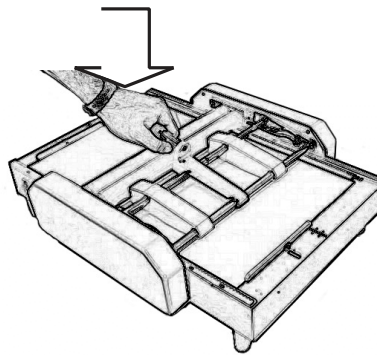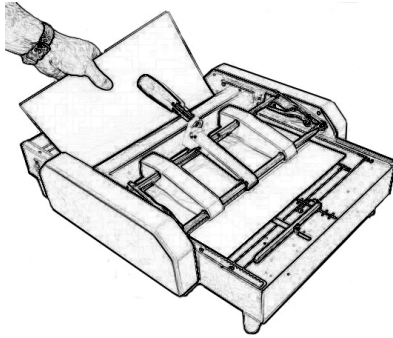

BookletMate Features:

- Adjustable side guides automatically center paper
- Sets up in seconds
- Paper size changes are quick and easy
- Staples and folds up to 12 sheets of 20 lb. bond
- Lightweight and portable
- Two staplers with four stapling positions

Specifications

Shipping Weight	37 lbs.		
Net Weight	33 lbs.	Maximum Thickness Books	12 sheets 20# Bond
Footprint	15½" (W) x 20" (L) x 6" (H)	Maximum Sheet Size	18½" (L) x 11¾" (W)
Electrical	115 Volts, 60 Hz, 1 Phase	Minimum Sheet Size	10¼" (L) x 7¾" (W)
Imported from China.			

Imaging Supplies Co, Inc.

804 Woodland Ave • Sanford, NC 27330
1-800-518-1152 • 1-919-776-1152 • Fax: 1-919-776-1320
Visit our web-site @ www.imagingsuppliesco.com